


WHITEWATER DESIGNS, INC.

Raft Travel Cover Installation Instructions

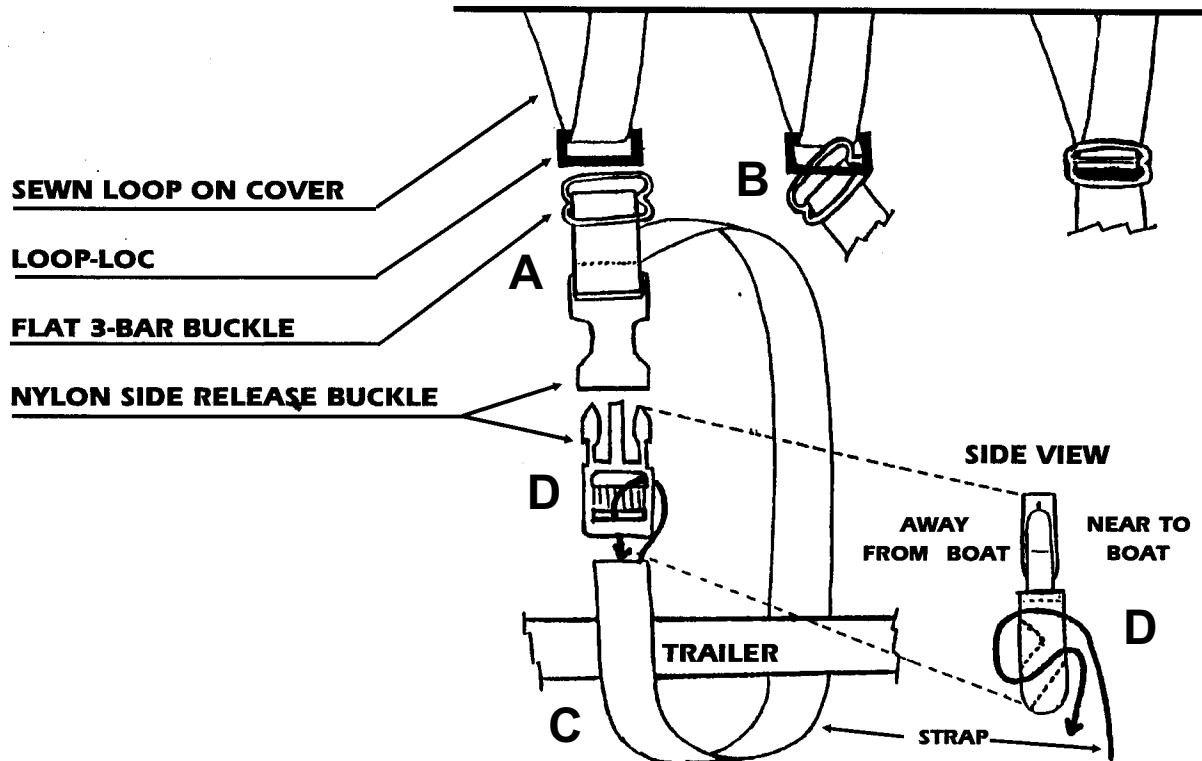

1210 RAFT TRAVEL COVER STRAP KIT STRAP/BUCKLE BOAT COVER TIE-DOWN KIT INSTALLATION INSTRUCTIONS

- A. At one end of each tie-down strap, you'll find a nylon side-release buckle and a flat 3-bar buckle sewn to the strap.
- B. Slip the flat 3-bar buckle through the loop-loc sewn on the cover. Be sure to slide it through from the back, so the buckle is not against the boat.
- C. Loop the strap down around the trailer frame and back up to the nylon side-release buckle.
- D. Thread the strap (from the back) through the top opening of the side-release buckle and then back down and through the bottom opening.
- E. Cinch the strap down tightly enough, so that when straps are installed on both sides of the boat, the cover is held taut. (Make sure the cover is centered and evenly installed on the boat.)
- F. After installing the appropriate number of straps around the perimeter of the cover, cut the hanging tails of each strap approximately 12" from the buckle. Singe the cut edge with a lighter or match to fuse and prevent unraveling. You can now simply release the side-release buckles to remove and install the cover.

Note: It is important that the sides and rear of the cover are adequately tied down, which normally requires 2 to 3 straps on each side and 2 to 3 on the back.

If additional or replacement straps are desired, they are available from:

Whitewater Designs, Inc. • 520 Commercial Suite K • Eugene, OR 97402
www.whitewaterdesigns.com • Voice (541) 485-4804 • Fax (541) 485-5676